Engine Distributors Inc.

4G and GCP Diagnostic Software Installation Guide

Click Here for Diagnostic Software Download

- Clicking the link above will bring you directly to the diagnostic software tab on our website for access to the free software

Click Here for Diagnostic Software Download

- 4G Display Requires both the 4G_Volume and 4G_Display. GCP Display has only one fine. This can be seen below.

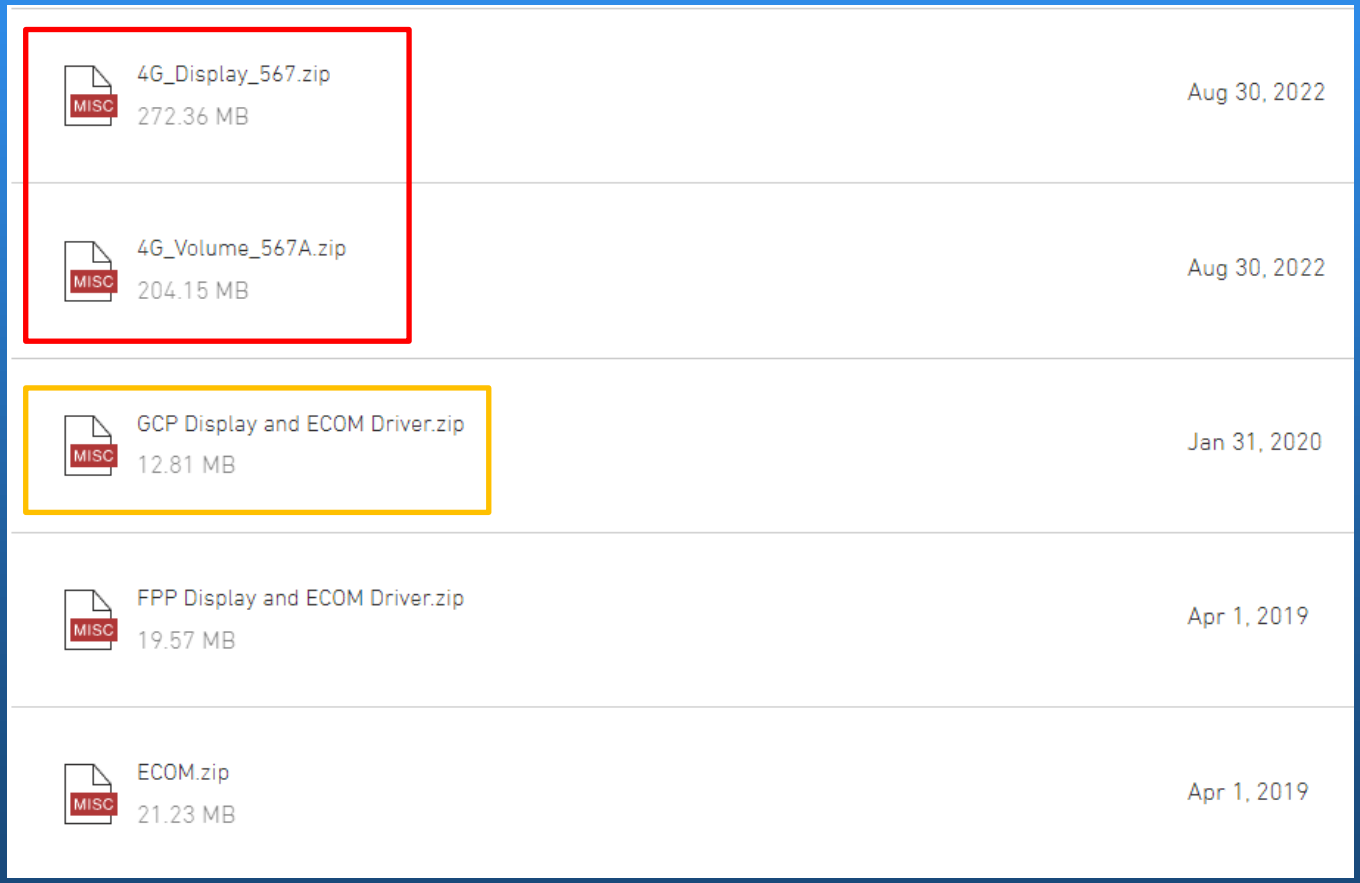

4G Display VS GCP Display

- 4G Display Software Installation begins on the next page.
- Skip to page 16 for GCP Display Software Installation Instructions

4G Display Software Installation

- Begin by downloading 4G Volume and 4G Display. This will leave you with two .zip files in your downloads. Right click -> Extract All on each file, which will leave you with two normal files folders.
- Please work out of the **normal** file folders for proper installation.

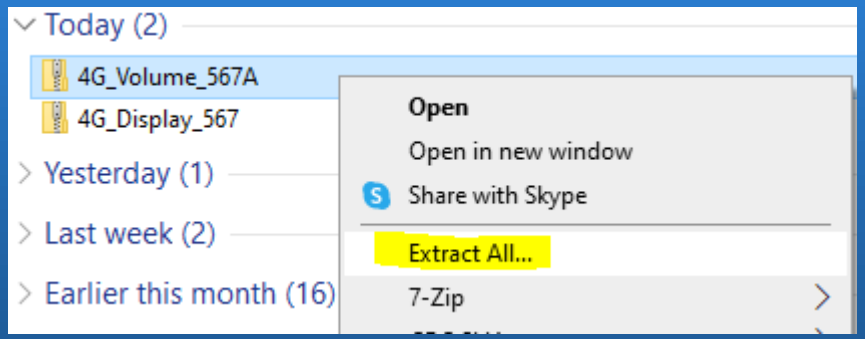

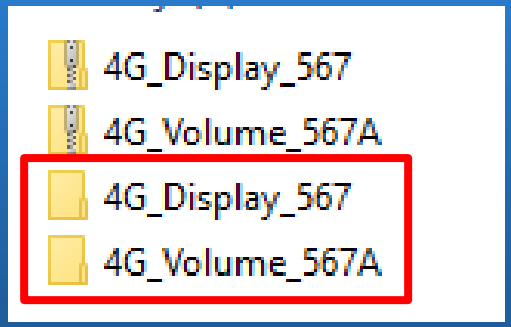

- Begin in the 4G_Volume_XXX folder

4G Display Software Installation

- Open the 4G_Volume_XXX folder to find “EDIS_XXX_Volume”, click on that folder.

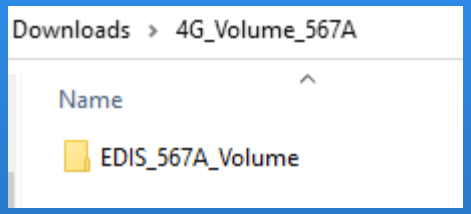

- Select “Setup” (Application) and run through the installer.

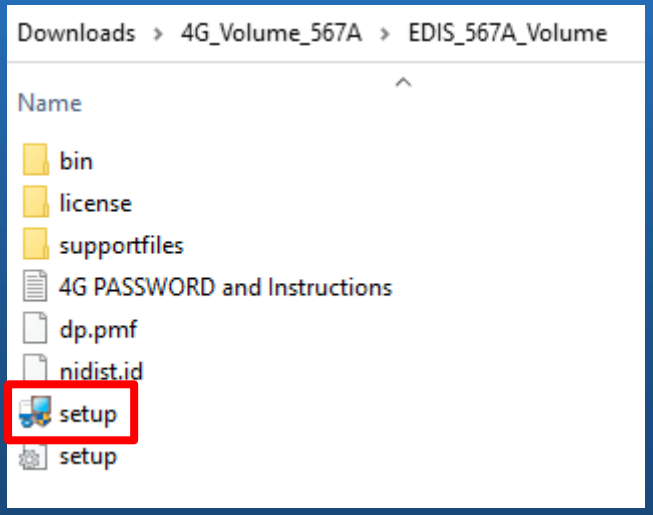

4G Display Software Installation

- Click Yes/Allow if prompted and allow the installer to initialize.
- Select Next on screen below.

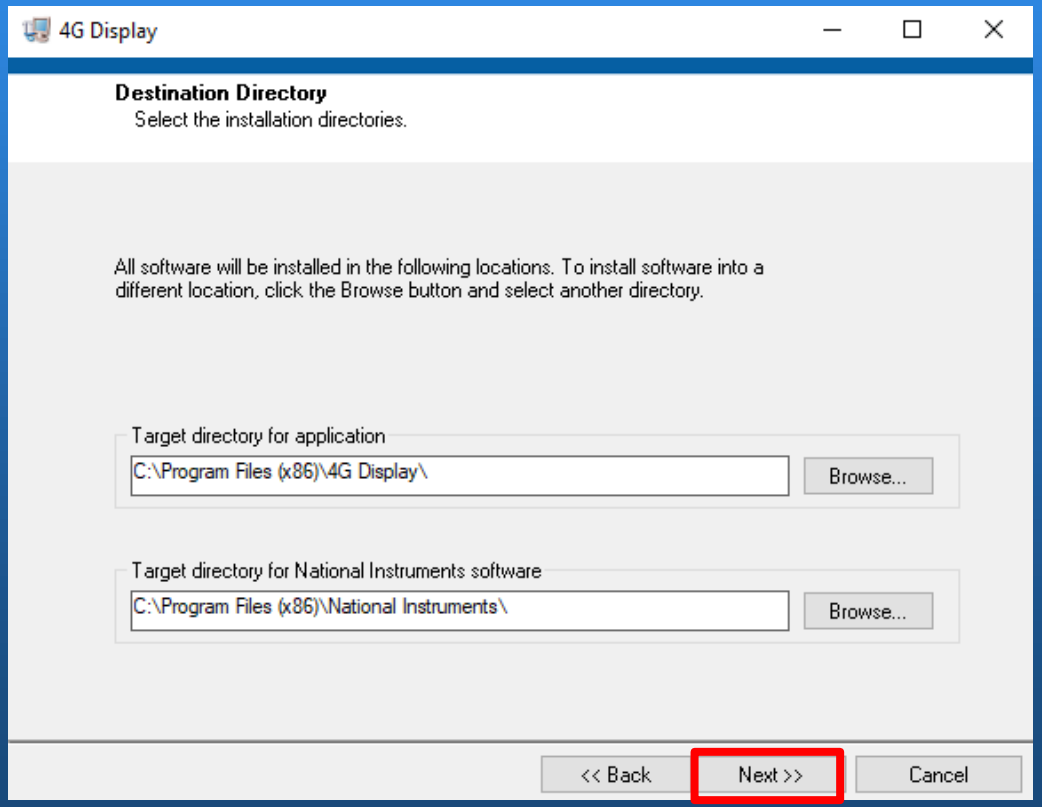

4G Display Software Installation

- Select “I accept the License Agreement” and choose Next>>

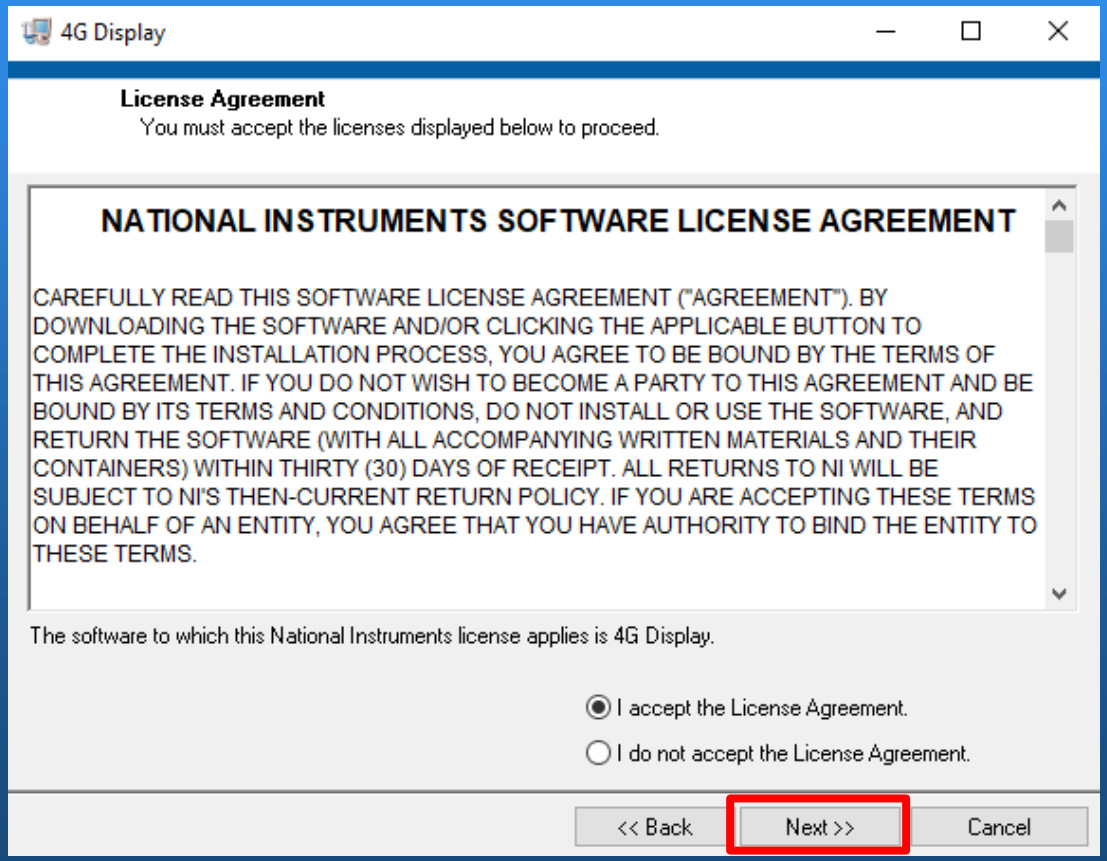

4G Display Software Installation

- Select Next>> and wait for installation to complete.

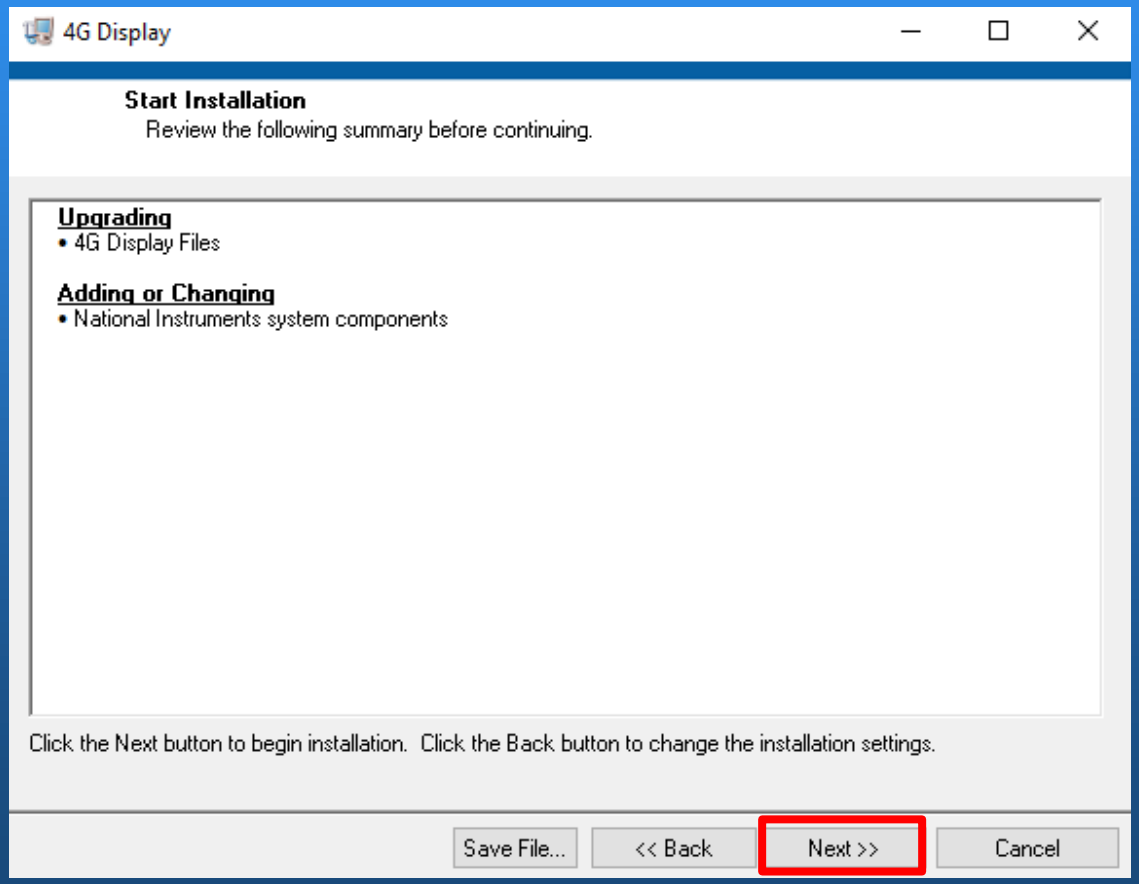

4G Display Software Installation

- Select Finish and then open the 4G_Display folder. Select Latest_4G_Display, and then PC Display

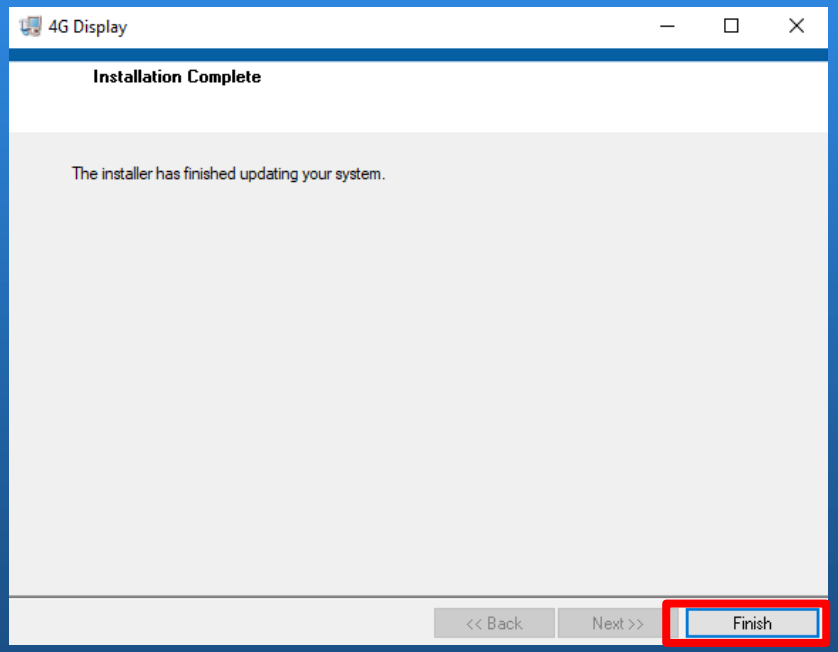

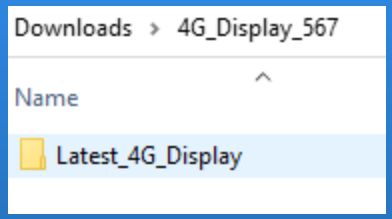

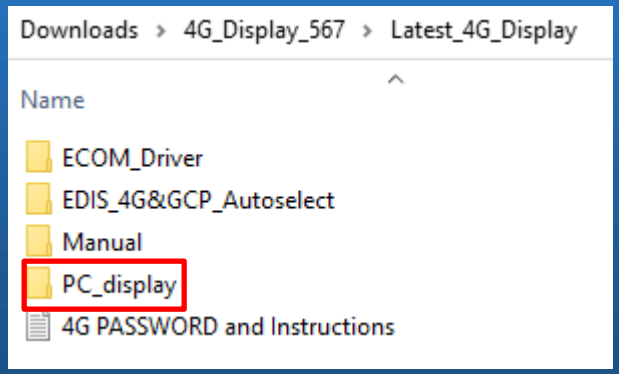

4G Display Software Installation

- Select 4G Display and run the installer. Click Next.

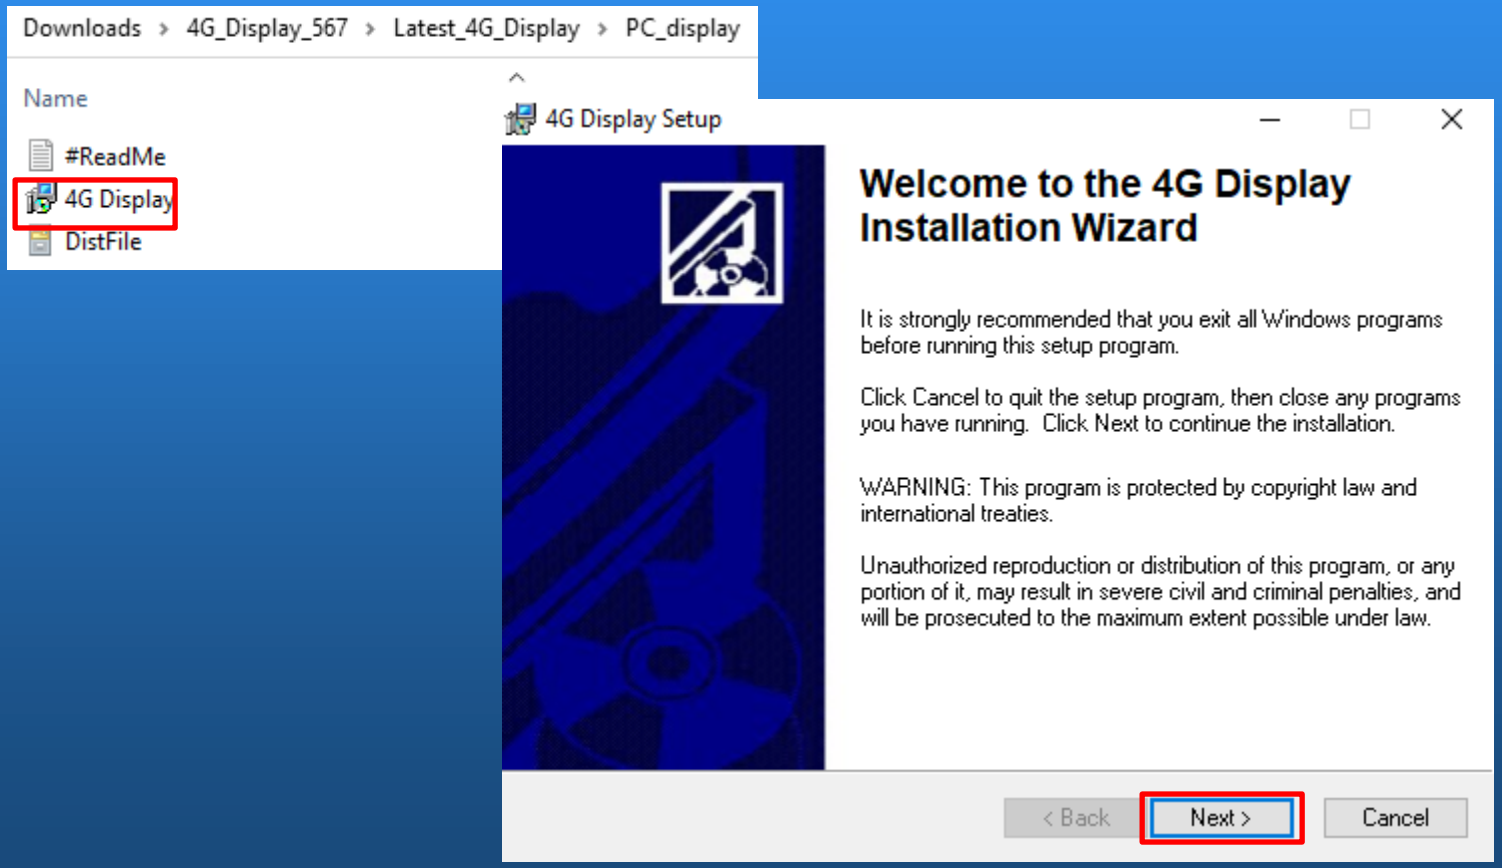

4G Display Software Installation

- Click Next on both pages. If prompted, select Yes/Allow to begin installation

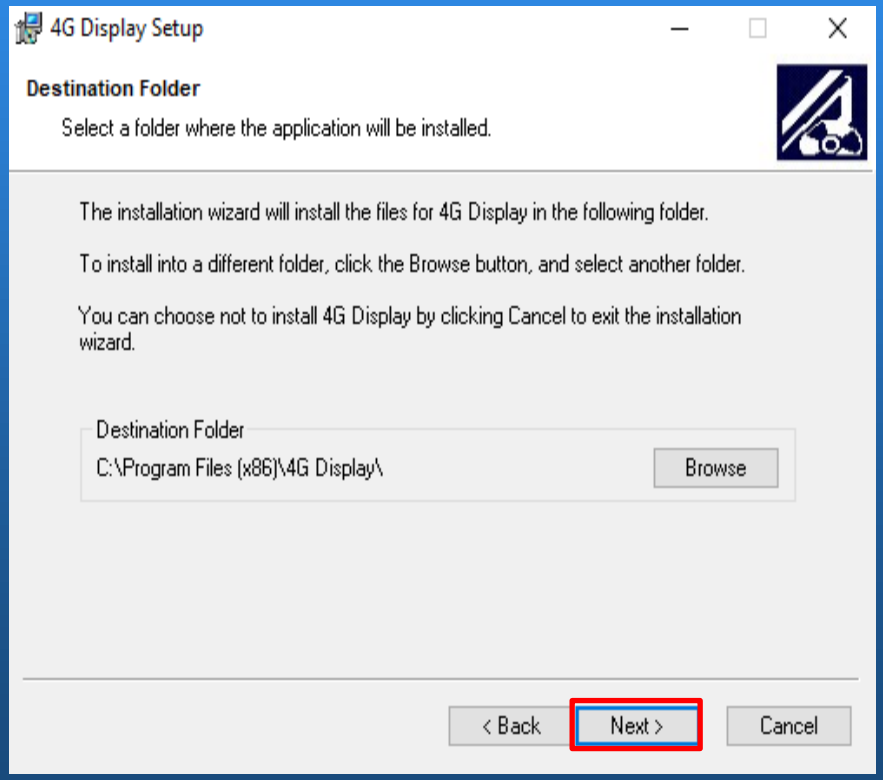

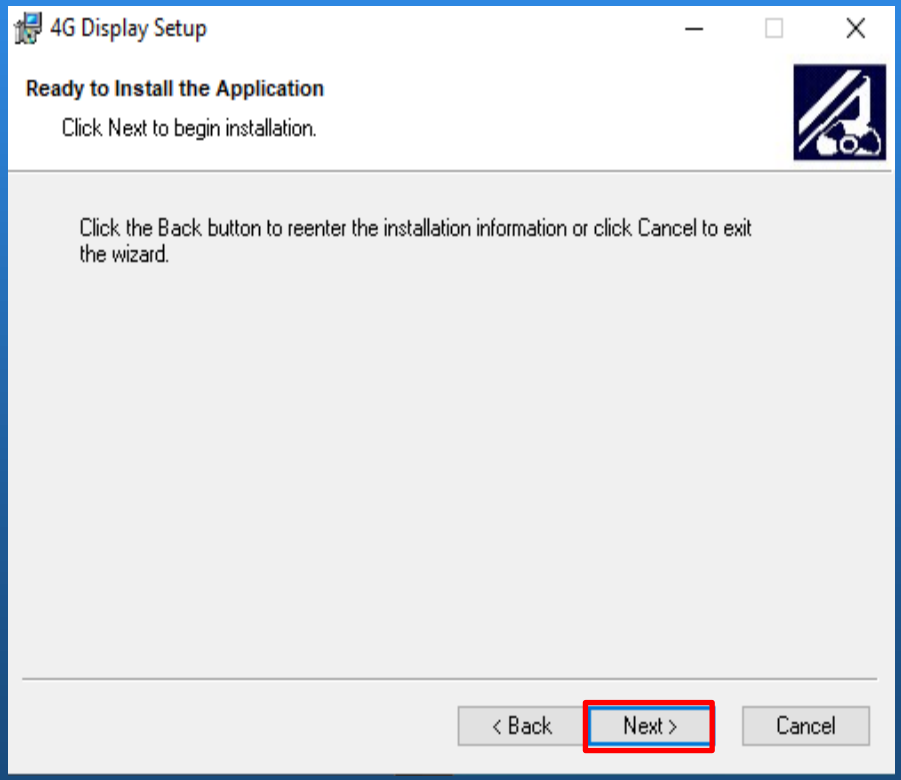

4G Display Software Installation

- Once installed select Finish. And then go back into the 4G Display folder and Choose ECOM Driver. Select Driver_Setup

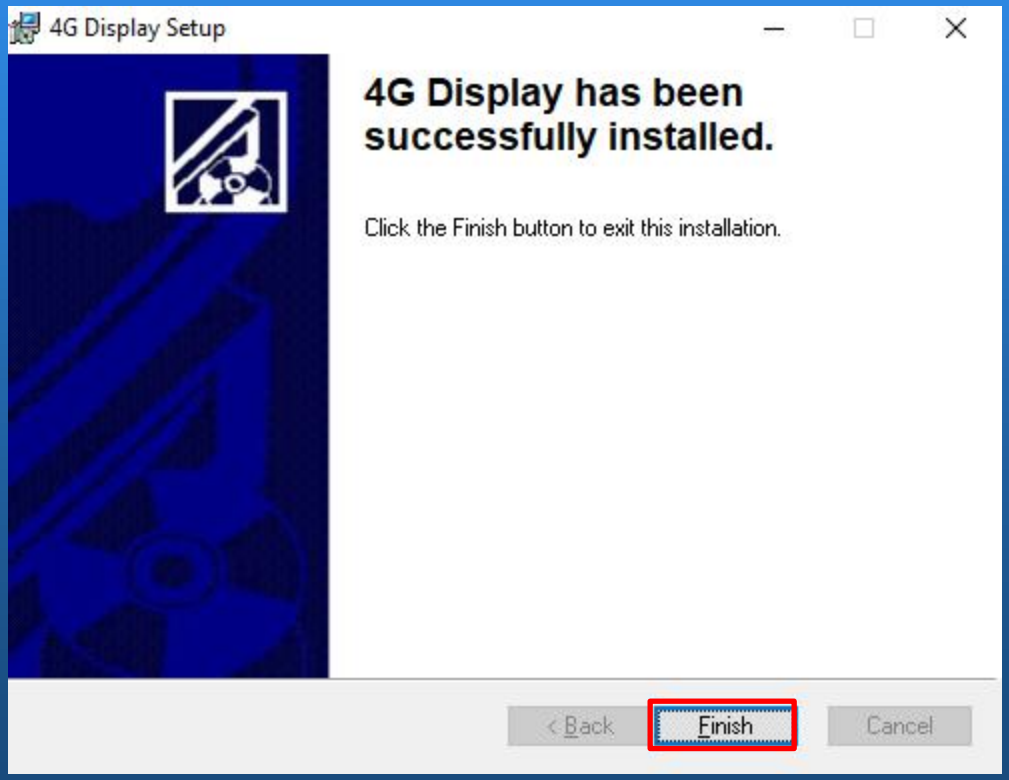

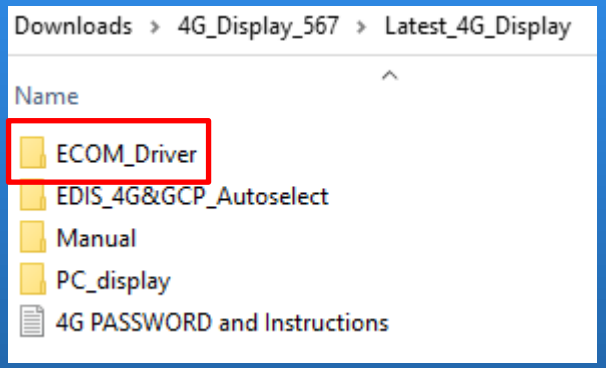

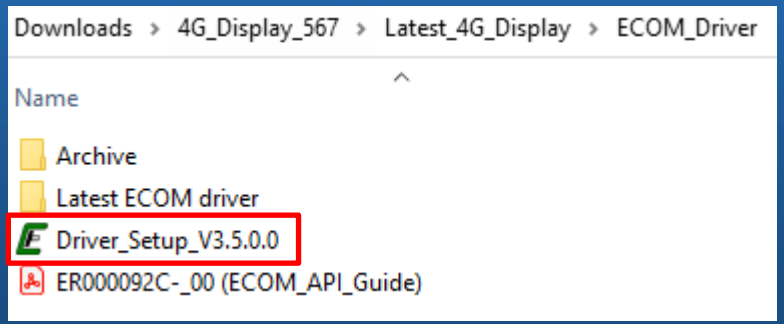

4G Display Software Installation

- Select Next. Select Install.

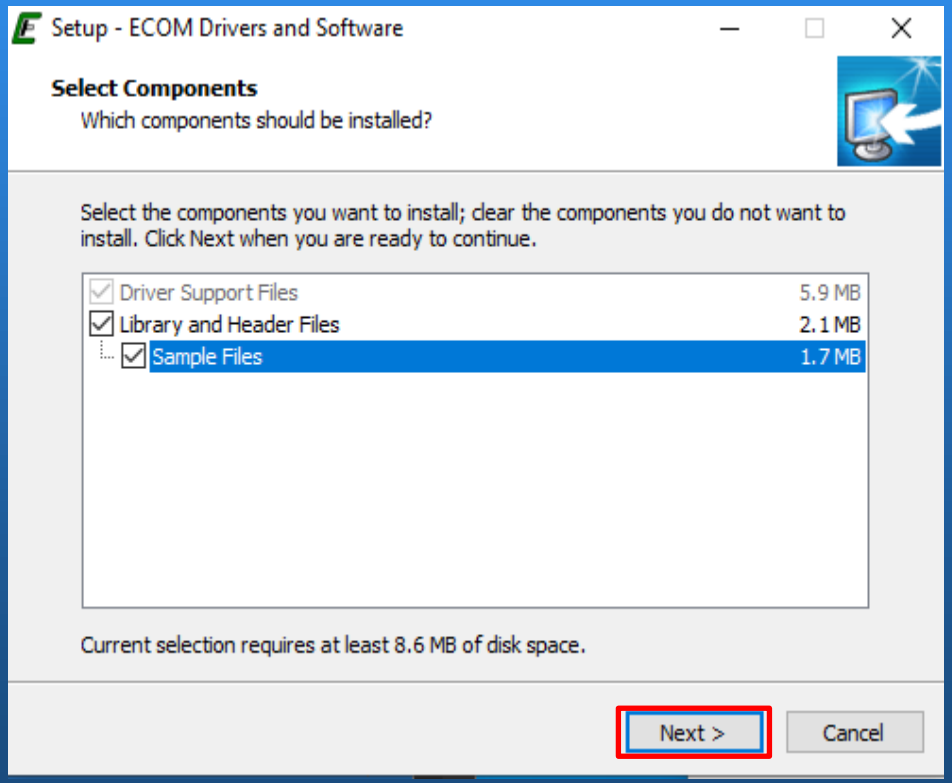

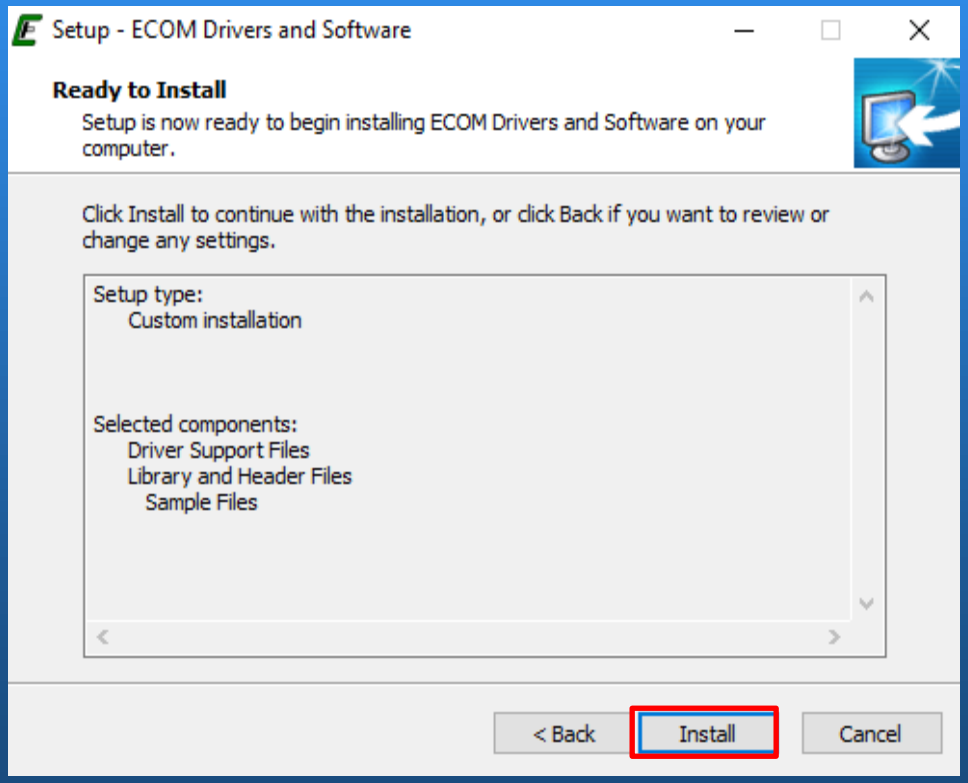

4G Display Software Installation

- Select Finish. Installation is now complete. Use the 4G PASSWORD and Instructions to sign into the software when connected to an engine.
- 4G Password:
  - B0ZW-VYVO-WNVO-FKVP
- Target Password:
  - WVMLDWK0OKHG3-HJGJEBLAP3HJI
- Copy password and choose paste and select save password.

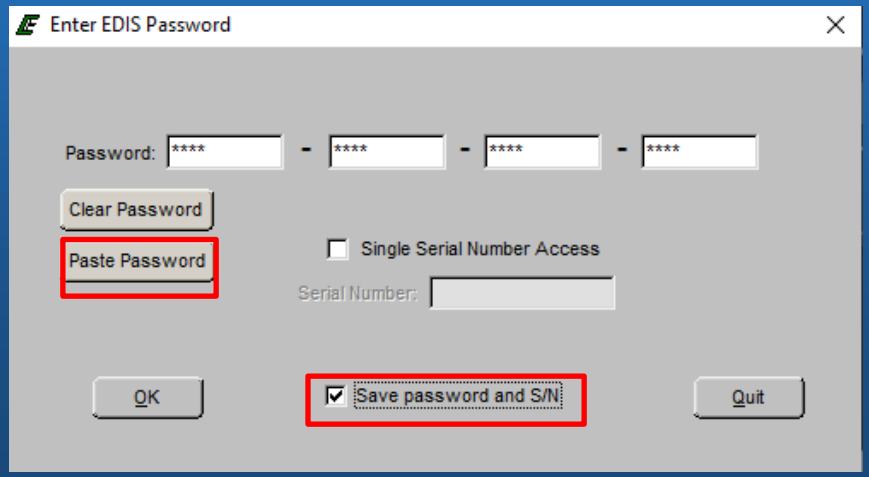

GCP Display Software Installation

- Begin by downloading GCP Display and ECOM Driver. This will leave you with a .zip file in your downloads. Right click -> Extract All on the file, which will leave you with a normal file folder.
- Please work out of the **normal** file folder for proper installation.

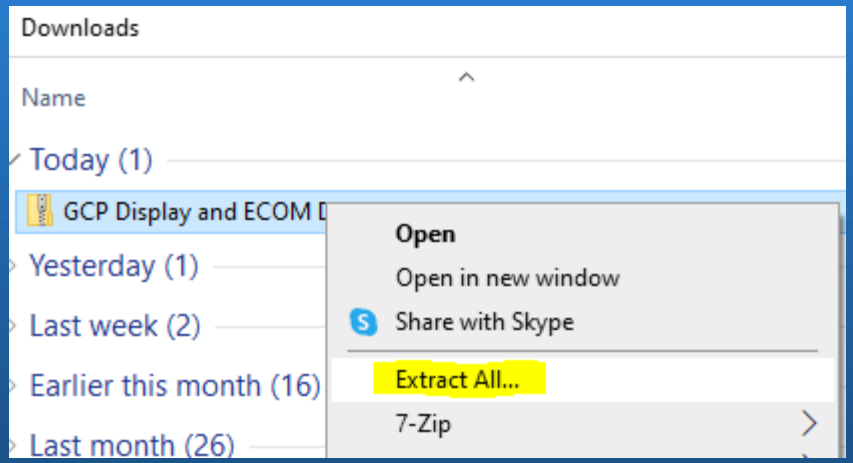

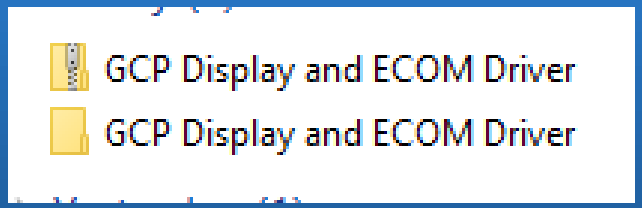

GCP Display Software Installation

- Open the GCP Display and ECOM Driver Folder until you see three options.
- Select GCP_Display_269A

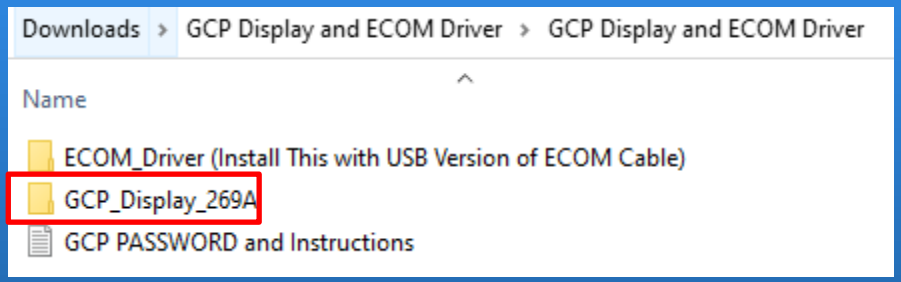

- Select PC_Display_New_Plotter

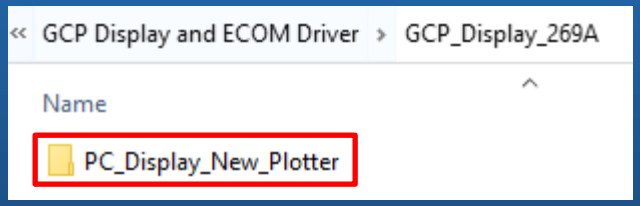

GCP Display Software Installation

- Select “GCP Display” (Windows Installer Package) to begin the installation.
- Select Next

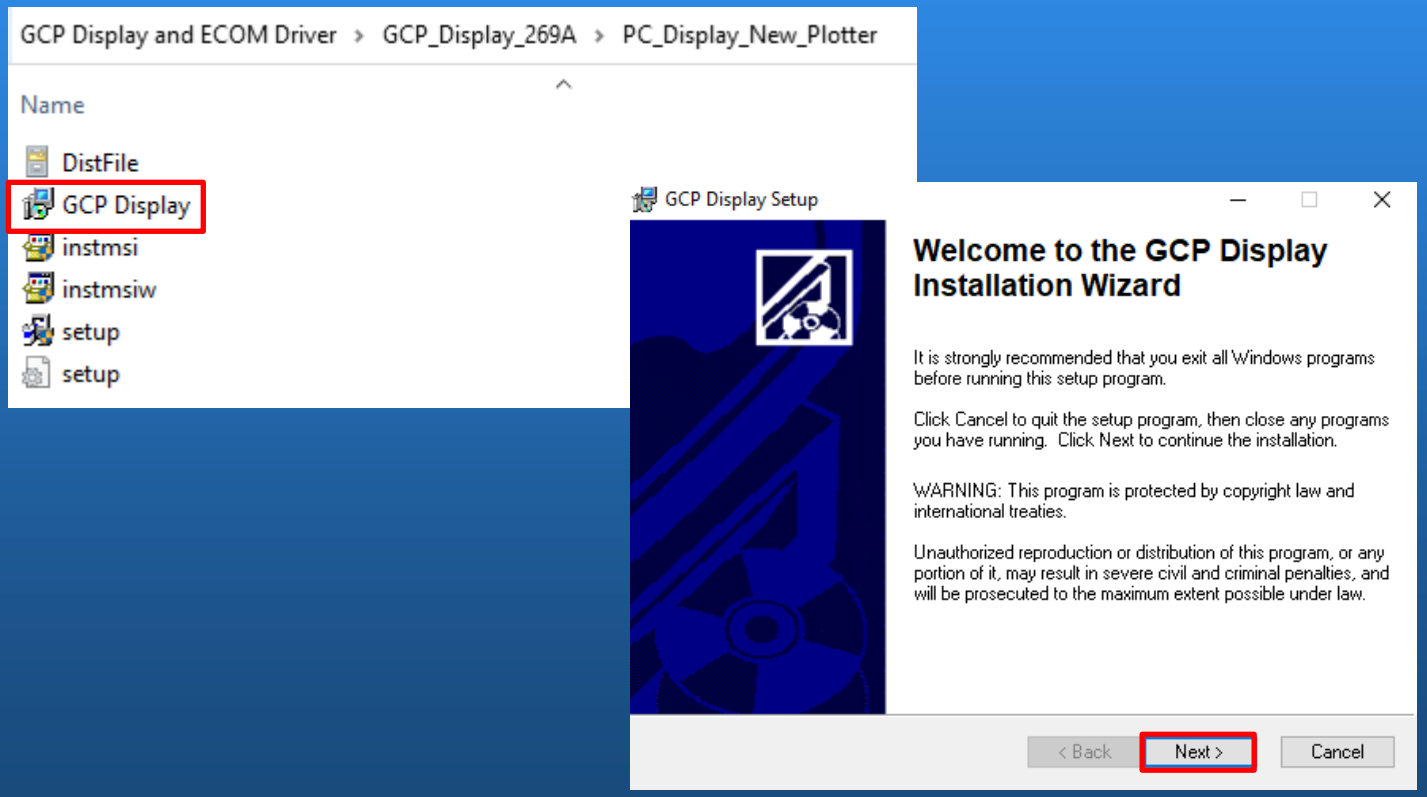

GCP Display Software Installation

- Select Next on both pages. If prompted, select Yes/Allow to begin installation.

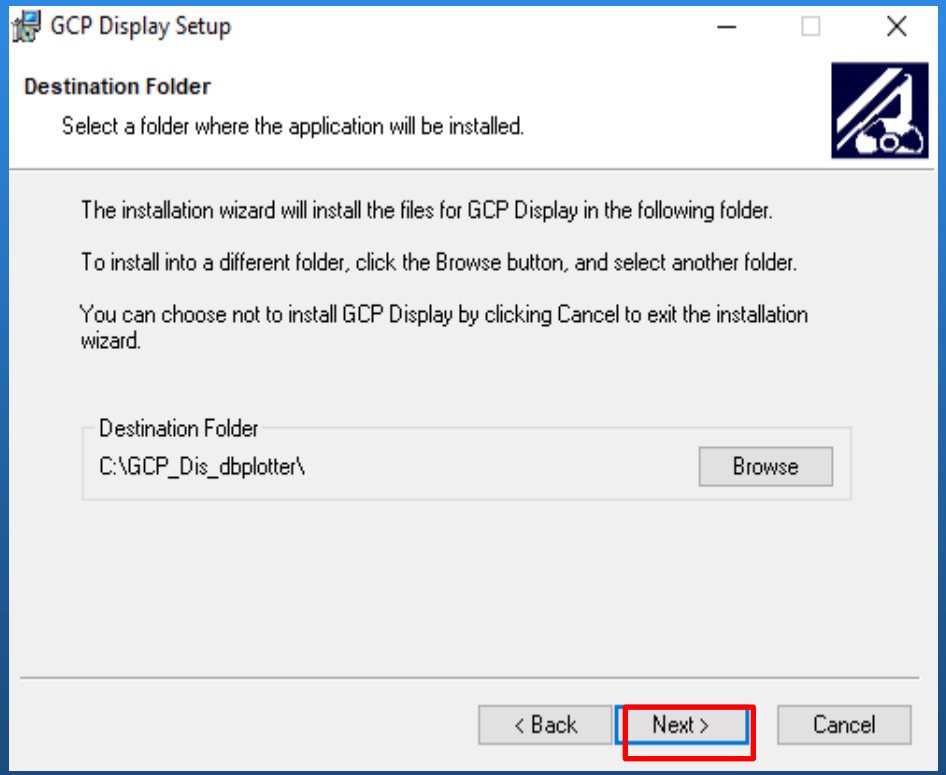

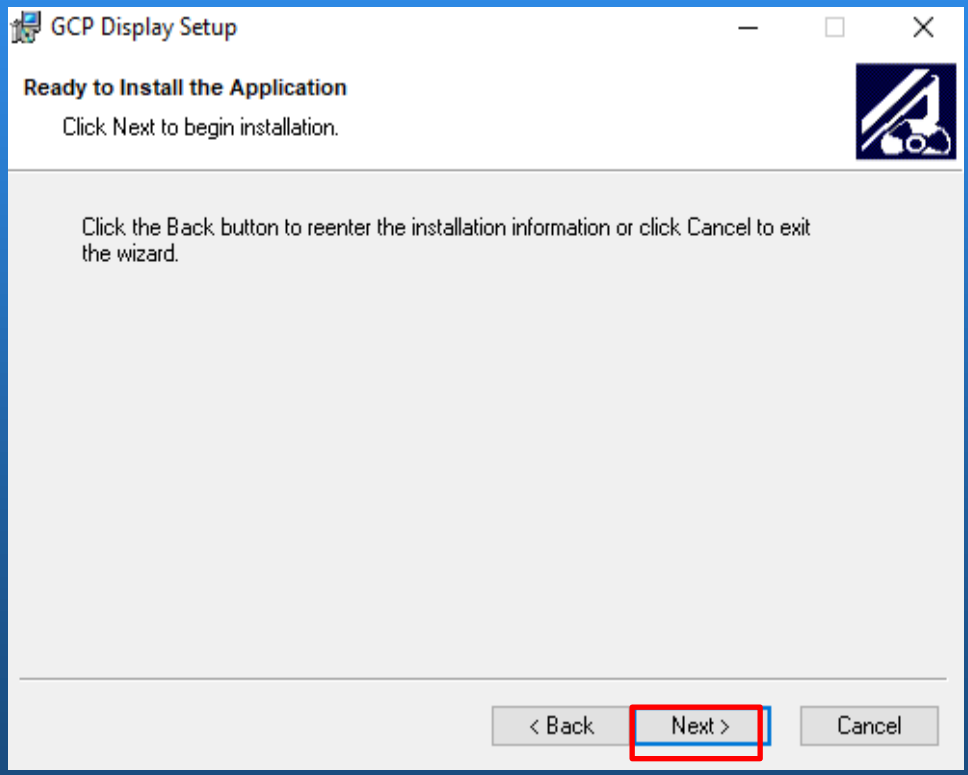

GCP Display Software Installation

- Once installed select Finish. And then go back into the GCP Display and ECOM Driver folder and Choose ECOM Driver. Select Driver_Setup

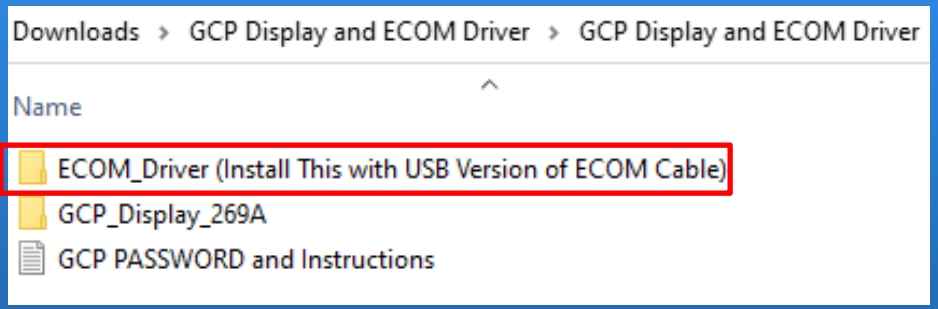

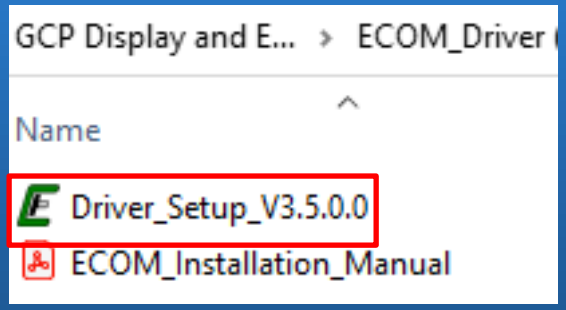

GCP Display Software Installation

- Select Next. Select Install.

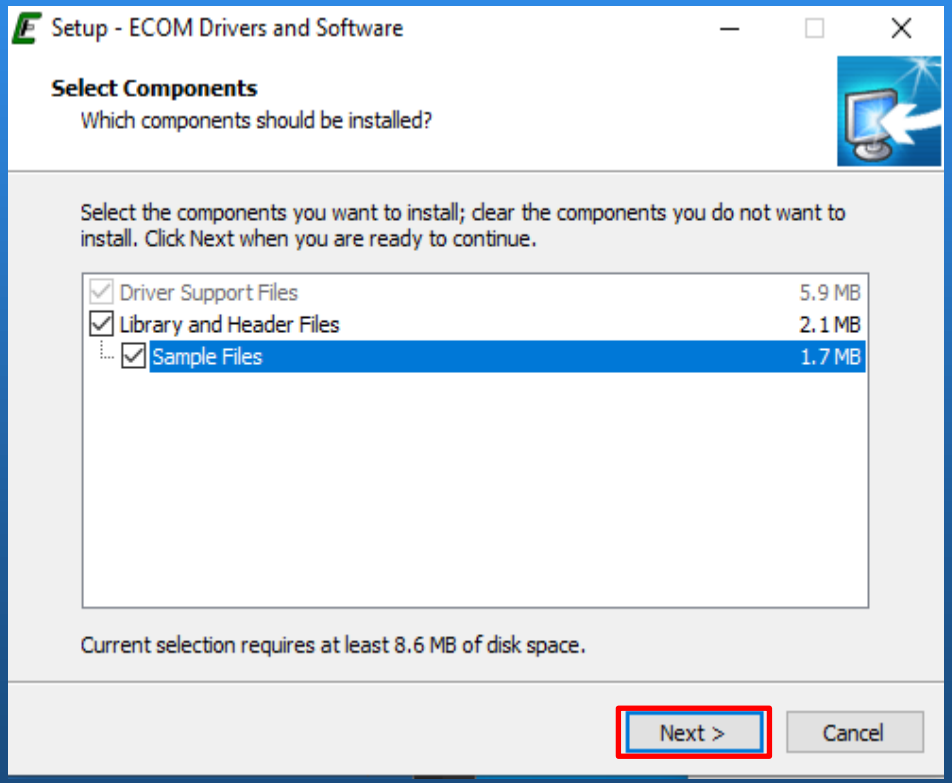

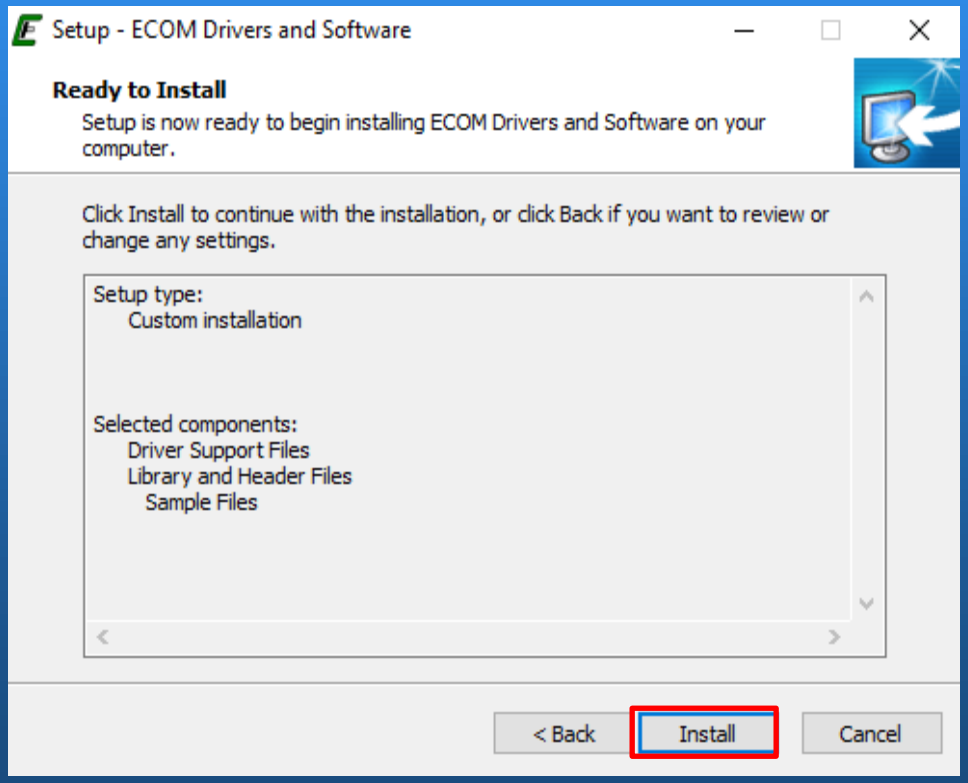

GCP Display Software Installation

- Select Finish. Installation is now complete. Use the GCP PASSWORD and Instructions to sign into the software when connected to an engine.
- GCP Password:
  - BYZW-WVEO-GNVW-GCWP
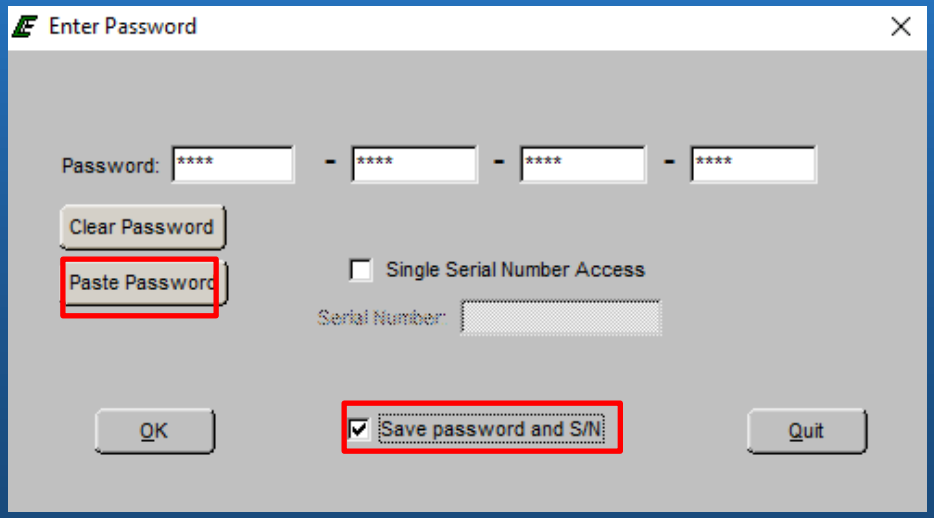
- Copy password and choose paste and select save password.